

PROJECTOR PLUS ELECTRONIC SCREEN and SOUND

If you wish to project images onto the electric screen situated above the stage and use the projector plus use the sound system then please follow the below instructions.

The Stage Sound and Lighting Box is located behind the curtains on stage on the right hand side. You will need a code to the key box on stage underneath the light switch (turn on stage lights) next to the stage sound and lighting box to obtain a key to the padlock on the doors of the stage sound & lighting box.

Please return the key to the box once the padlock is open and scramble the numbers of the key box.

Start-Up Instructions

Projector Screen

In the Stage Sound & Lighting Box turn on the power to the screen, power button on the wall, left hand side, top shelf.

Drop the screen by using its remote control; locate the screen remote control which is white and kept on top of the suppressor. Standing in the Main Hall with the screen remote control pointing at the screen, press the down button to start the screen dropping, when it has reached the desired length press the middle button to stop it.

Projector

Remove the lens cap from the lens on the projector and take the lens caps with you to the Stage Sound & Lighting Box on stage (Step ladder is in the Hall Store at the rear of the Hall).

Locate the Projector Remote control which is kept on top of the suppressor in the Stage Sound & Lighting Box bottom shelf; the remote is labelled PROJECTOR.

Turn on the projector using its remote control by pressing the green button; you need to be standing in the Hall right in front of the projector for the projectors remote control to function for the first time.

To realign the screen use the up or down arrows on the remote control or the left and right arrows bottom left of the remote control; press the exit button to cease this function. You must stand in the Hall and point the remote at the projector for this function to work.

To change input to the Projector press the 'input' button on the remote control; you need to point the remote at the projector but you need to face the screen and watch the bottom left for the input modes:

Input Modes: HDMI1 = Both Blue Ray Players and Stage HDMI Connection
 HDMI2 = HDMI cable on the right of the metal rack

Set the input to HDMI1

No other connection modes are available.

STAGE HDMI CONNECTION

Turn on the white power plug situated at the rear of the bottom shelf in the Stage Sound and Lighting Box for the light.

Unlock the metal rack underneath the Stage Sound & Lighting Box.

Keys are in the Stage Sound & Lighting Box, bottom shelf, on the left on a hook on the wall.

Turn on the power to the sub woofer - the power plug is at the bottom of the wall the same side of stage as the curtain pulley.

Press the power button on the following equipment in the metal rack; hearing loop, Denon amp, amp1, amp2, amp3, and amp4.

DO Not Press any power buttons on any kit on the bottom shelf in the Stage Sound and Lighting Box.

Connect up the PC by using the HDMI lead on the left hand side of the metal rack. An extension lead will be required for power as there are not any electrical sockets available near the equipment.

MULTI REMOTE CONTROL USE

This multi remote controls all the equipment on the bottom shelf of the Stage Sound & Lighting Box.

Start-Up Instructions

Locate the multi remote control, kept in its cradle on the left of the bottom shelf in the Stage Sound & Lighting Box.

Activate the screen on the multi remote control by touching the screen; make sure it displays the home screen as below picture, if not press the house icon on the multi remote control.

If the screen is completely blank then press and hold down the 'off' button located at the top of the remote for 3 seconds, the remote will power on and display the below home screen.




Caption	Used For
Watch Blu Ray1	DVD or Blue Ray Disks
Watch Blu Ray2	DVD or Blue Ray Disks
Enable Sound Desk	Microphones & Blue Tooth Adapter
Enable FOH Audio	VGA connection
Stage HDMI	HDMI Connection (No microphones)

Press the Stage HDMI icon to activate the correct connection.

Volume Levels

To activate the volume buttons there is a loud speaker icon on the above home screen display bottom left. Press this and the below screen is displayed

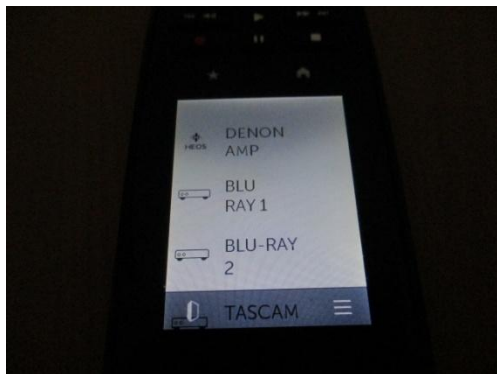

Press the Denon Amp caption and the volume control buttons on the multi remote control: they will now work. To increase the volume press the ‘Vol’ button upwards and to decrease the volume press the ‘Vol’ button downwards.

The left hand icon is now displaying ‘<’ the backwards arrow will take you back to a previous screen.

End of the Session Shutdown Instructions

Projector Shutdown

Turn off the projector using its own remote control by pressing the red standby button twice very quickly, standing in the Main Hall facing the projector.

Return the remote control to the Stage Sound & Lighting Box locating it on top of the suppressor on the bottom shelf.

Replace the Lens cap onto the lens on the projector itself.

Projector Screen Shutdown

Bring the screen backup up using its remote control by pressing the up arrow. You need to be standing in the Main Hall facing the screen for the screen remote control to work.

Return the screen remote control to the Stage Sound & Lighting Box on stage by putting it on top of the suppressor.

Turn off the power to the screen, power button top shelf left hand side on the wall.

Stage HDMI Shutdown Instructions

Shutdown Press Stage HDMI icon to stop the function you have been using.

Make sure the home screen is displayed on the multi remote control as below. If not press the house icon. All functions should be off as shown on below screen.



Replace the Multi Remote control to its cradle on the left on the bottom shelf in the Stage Sound & Lighting Box.

Un-cable the PC from the HDMI cable which is rolled up and left on the side of the metal rack.

Turn off the power to the sub woofer - the power plug is at the bottom of the wall the same side of stage as the curtain pulley.

Press the power button to turn off the following equipment in the metal rack; Amp1, amp2, amp3, amp4 and hearing loop, the Denon amp should be already off, if not then turn it off.

Lock the metal cabinet and return the key to its location in the Stage Sound & Lighting Box.

Turn off power plug situated at the rear of the second shelf in the Stage Sound & Lighting Box for the Light

Remember to lock the Stage Sound & Lighting Box and don't forget to turn off lights on stage.